GB

PROGRAMME CHART

A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication

C. "Water tap closed" indication

D. "Clean pump" indication

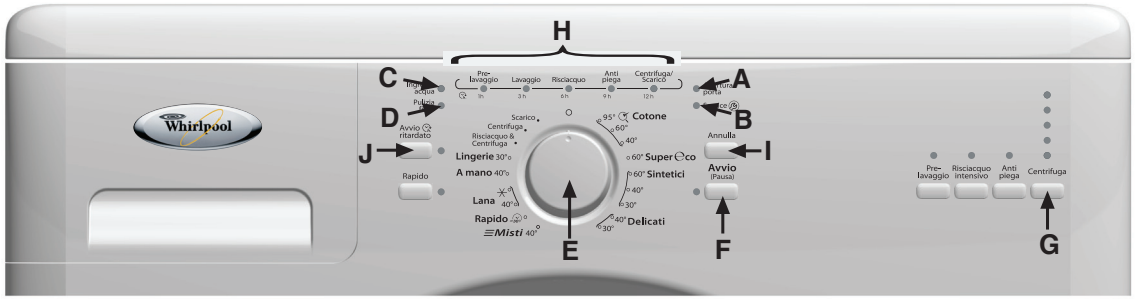

E. Programme selector

F. "Start /Pause" button

G. Spin speed selector

H. Programme sequence indicator and Start delay indication

I. "Reset" button

J. "Start delay" button

Programme		Care Labels	Max. Load kg	Type of wash / Notes *- Respect the manufacturer's recommendations on the care label*	Detergents and Additives			Special options						Max Spin Speed rpm
					Pre-wash	Main Wash	Softener	Start delay *Avvio ritardato*	Rapid *Rapido*	Pre-wash *Pre-lavaggio*	Intensive risnse *Risciacquo intensivo*	Rinse hold *Anti piega*	Spin *Centri-fuga*	
Cotton/ Antibacterial *95 °C*	**Cotone** *95 °C*	95	6.0	Normally to heavily soiled and robust white cotton laundry. In case of heavy soiling or stains, you can add an oxygenbased bleach additive which can be used at 95°C. *This programme eliminates bacteria, ensuring sanitization of your laundry.*	❊	Yes	❊	❊	–	❊	❊	❊	❊	Max.
Cotton *40 - 60 °C*	**Cotone** *40 - 60 °C*	40 60	6.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	❊	Yes	❊	❊	❊	❊	❊	❊	❊	Max.
SuperEco *60 °C*	Super Eco *60 °C*	95 60 60	6.0	Heavily soiled and robust laundry made of cotton, synthetics and their blends. *Economical energy consumption by prolonged wash duration - ideal to be run overnight to profit from more favourable energy rates. Avoid noise of spinning at night by setting the spin speed to "0" and start spin programme in the morning, or by defining programme start with "Start delay" accordingly. - For garments with a high share of synthetic fibres, we recommend to use a laundry net.*	–	Yes	❊	❊	–	–	❊	❊	❊	Max.
Synthetics *30 - 40 - 60 °C*	**Sintetici** *30 - 40 - 60 °C*	60 50 40 30	3.0	Normally soiled garments made of artificial fibres (like polyester, polyacryl, viscose etc.) or their blends with cotton.	❊	Yes	❊	❊	❊	❊	❊	❊	❊	Max.
Delicates *30 - 40 °C*	**Delicati** *30 - 40 °C*	40 30	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	❊	Yes	❊	❊	–	❊	–	❊	❊	Max.
Daily load *40 °C*	***Misti*** *40 °C*	60 40 60 40	3.0	Slightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. *Effective one-hour programme. Make sure to wash only similar colours together in one wash load.*	–	Yes	❊	❊	–	–	❊	❊	❊	Max.
Quick wash *30 °C*	**Rapido** *30 °C*	30	3.0	Shortly worn clothing made of cotton, polyester, polyamide and blends with cotton. *Brief 30-minutes programme to refresh your laundry.*	–	Yes	❊	❊	–	–	–	❊	❊	Max.
Wool *Cold - 40 °C*	**Lana** *- 40 °C*	Woolmark 40	1.0	Only woollens, labelled with the Woolmark and identified as machine washable. *This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.*	–	Yes	❊	❊	–	–	–	❊	❊	Max.
Handwash *40 °C*	**A mano** *40 °C*	Woolmark	1.0	Textiles made of silk, linen, wool and viscose marked as "handwashable". Care programme with a very gentle spin. *This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool.*	–	Yes	❊	❊	–	–	–	❊	❊	400 [1]
Lingerie *30 °C*	**Lingerie** *30 °C*	30	1.0	This programme is particurarly suitable to treat delicate lingerie (use of laundry net strongly recommended).	–	Yes	❊	❊	–	–	–	❊	❊	400 [1]
Rinse & Spin	*Risciacquo & Centrifuga*	–	6.0	*Same as the last rinse and the final spin in the "Cotton" programme.*	–	–	❊	❊	–	–	❊	❊	❊	Max.
Spin	*Centrifuga*	–	6.0	*In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.*	–	–	–	❊	–	–	–	–	❊	Max.
Drain	*Scarico acqua*	–	–	*Drain only - no spinning. Alternative method of terminating programme after "Rinse hold".*	–	–	–	❊	–	–	–	–	–	–

❊ : option / Yes : dosing required

[1] For improved garment care spin speed is restricted to 400 rpm in this programme.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0619

Whirlpool is a registered trademark of Whirlpool USA

5019 301 01239

CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh) without "Rapid"	Approx. programme duration (hours : minutes) ⏲	
					without "Rapid"	with "Rapid"
Cotton/ Antibacterial	95	6.0	59*	1.90	2:00	-
Cotton **	60	6.0	49	0.78	4:00	2:30
Cotton **	60	3.0	37	0.69	2:20	***
Cotton	40	6.0	54	0.65	2:45	1:45
Cotton **	40	3.0	37	0.58	2:30	***
SuperEco	60	6.0	51	0.72	4:00	-
Synthetics	60	3.0	50*	0.70	1:30	1:09
Synthetics	40	3.0	46	0.50	1:15	0:54
Delicates	30	1.5	50	0.50	0:45	-
Daily load	40	3.0	45	0.45	1:00	-
Quick wash	30	3.0	40	0.40	0:30	-
Wool	40	1.0	55	0.60	0:45	-
Handwash	40	1.0	45	0.60	0:40	-
Lingerie	30	1.0	45	0.50	0:36	-

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

⏲ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference programmes for Energy Label.

*** Automatic adaptation of programme duration after detection of wash load

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergents as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

- Turn the **programme selector** to the desired programme and temperature.
- The indication lamp next to "**Start/Pause**" button blinks.
- The indication lamp of the predefined spin speed lights up.

SELECT ANY DESIRED OPTION

Push the button of any option desired - the respective indication lamp lights up.
If the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Rapid" button
- Enables quicker washing by shortening the programme duration.
- Recommendable for small loads or only lightly soiled laundry.

"Prewash" button
- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the "Prewash" option.

"Intensive rinse" button
- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

"Rinse hold" button
- The laundry remains in the last rinse water without pregressing to the final spin cycle to avoid creasing and prevent colours from changing.
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
  Note: The programme stops to "Rinse hold" at the time the "Rinse hold" lights in the preogramme sequence indication is on. The indication lamp next to the **"Start/Pause"** button blinks.

Terminate the "Rinse hold" option:
- Press the **"Start/Pause"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button.

"Spin" button
- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating "Start delay" option.

- Select programme, temperature and options.
- Press the "Start delay" button to select the delay time by 1, 3, 6, 9 or 12 hours.
- Press the **"Start/Pause"** button.
  The indication next to the "Start delay" button blinks and the countdown of the delay time begins.
- The time delay indication disappears when the programme starts and it is replaced by the programme sequence indication.
- Once having pressed the "**Start(Pause)**" button, the delay time can be reduced by pressing again the "Start delay" button.

To cancel the "Start delay"

..before you press the "Start/Pause" button:
- Turn the programme selector to another position or press the **"Reset"** button.

..after having pressed the "Start/Pause" button:
- Press the "**Start(Pause)**" button - the light of the selected start delay goes off. Press "**Start/Pause**" again if you want to start the selected programme immediately.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication lamp next to the **"Start/Pause"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Drain/Spin.

"DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset)" a running programme before the end".

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Service"
Lighting up of the "Service" indication can be caused by a fault in an electrical component.

"Water tap closed"
The washing machine has no or insufficient water supply; the water tap might be closed or the water inlet hose kinked.

"Clean pump"
Waste water is not pumped out. The drain hose may be kinked or the filter must be cleaned (see "Cleaning the filter" in your Instructions for Use).

PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.

1. Turn the programme selector to the "Off/O" position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again.
   The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press and hold the "**Reset**" button for a few seconds.
  Any existing water is drained out. It may last some time until the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA.

5019 301 01239